

AELO Web Service User Guide

V1.4 2025-05-30

NOTE: This document describes the updates introduced in the AELO Web Service during the first half of Year 4 to align with the requirements of ASCE 7-22 and ASCE 41-23. All updates are implemented in the BETA version of the AELO Web Service (<https://aelo-beta.openquake.org/>) and are not yet available on the production service.

The AELO Web Service provides a means for users to obtain building-code ground motion parameter values for a single site. The ground-motion parameters are for use with the ASCE 7-16, 41-17, 7-22, and 41-23 Standards. The web service can be used programmatically via a REST API, or via a minimal web user interface.

Contents

Obtaining an Account	2
Using the Web User Interface.....	2
Logging in	2
Running a calculation.....	3
Calculation Inputs	3
Instant error messages	3
Monitoring Calculation Progress.....	4
Downloading Calculation Outputs	6
Output Exceptions.....	9
Description of Calculation and Outputs.....	10
Main outputs.....	11
Advanced outputs	12
Nightly Quality Checks	14
QGIS Plugin.....	14
Connect to AELO Web Service	14
Using the REST API	19
Authentication, login/logout	19
Running a calculation.....	19

Obtaining an Account

Accounts are assigned by the GEM IT team on an invitation only basis. If you do not have an account and feel that you should have one, please contact Paul.Henshaw@globalquakemodel.org

When an account is created for you, you will receive an email with a link to set up a password.

Using the Web User Interface

In this section we briefly describe how to use the AELO web user interface (WebUI). The AELO WebUI has been tested with Firefox and Chrome, although it is possible that other modern browsers will work correctly.

Logging in

Open a browser and navigate to <https://aelo.openquake.org>; you should be presented with a page as shown below:

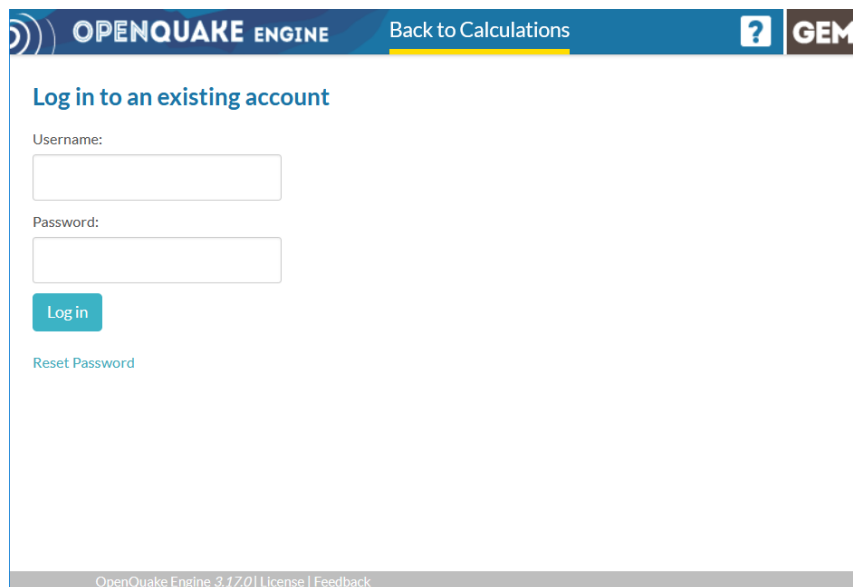


Figure 1: AELO Login page

Enter your username and password; you should now see a page with a short form for AELO calculation inputs and an initially empty list of calculations:

Run an AELO calculation

Latitude	Longitude	Site name
<input type="text" value="max. 5 decimals"/>	<input type="text" value="max. 5 decimals"/>	<input type="text" value="max. 256 characters"/>
ASCE standards	Site class	Vs30 (m/s)
<input type="text" value="ASCE 7-16 & 41-17"/>	<input type="text" value="BC"/>	<input type="text" value="760"/>

Figure 2: AELO calculation input form.

Running a calculation

In order to start an AELO calculation, we must provide the following input values:

Calculation Inputs

- Latitude: the latitude of the site (a floating point number in the interval [-90.0, +90.0], max. 5 decimal places)
- Longitude: the longitude of the site (a floating point number in the interval [-180, +180], max. 5 decimal places)
- Site name: a description to assign to the site (max. 256 characters)
- ASCE standards: choice between ASCE 7-16 & 41-17 and ASCE 7-22 & 41-23
- Site class: For ASCE 7-22 & 41-23 the form permits selection of a site class between A and E consistent with the definition of soil site class in Table 20.2-1 of ASCE 7-22. In these cases, a default Vs30 value is automatically assigned for the calculations. The user can also choose to “Specify Vs30” and enter a value within the admissible range 150-3000 m/s. For ASCE 7-16 & 41-17 the site class selector is disabled and Class B is automatically selected with a corresponding Vs30 of 760m/s. Note that in ASCE7-16 the site classes are defined in Table 20.3-1 of ASCE7-16 standards (Class BC is not included).
- Vs30: the time-averaged shear-wave velocity from the surface to a depth of 30 meters (a floating point number in the interval [150, 3000]). The Vs30 field is automatically populated when a site class other than “Specify Vs30” is chosen. For more information about Vs30 please see <https://earthquake.usgs.gov/data/vs30/>

All input parameters are required in order to perform an AELO calculation. Once the input values have been inserted, press the “Submit” button.

Instant error messages

In some cases, the WebUI will give an error message rather than starting a calculation. These are sometimes due to user errors, while other times the cause is WebUI limitations. Table 1 lists the known error messages that a user may encounter and their causes. For other error messages, please contact: aelo_support@globalquakemodel.org

Error message	Cause and action (if applicable)
Invalid input value Latitude: "latitude xxx ¹ > 90" Or Invalid input value Latitude: "latitude xxx ¹ < -90"	The user entered an incorrect site latitude; check the coordinates and try again

<p>Invalid input value Longitude: "longitude XXX¹ > 180"</p> <p>Or</p> <p>Invalid input value Longitude: "longitude XXX¹ < -180"</p>	<p>The user entered an incorrect site longitude; check the coordinates and try again</p>
<p>Invalid input value Site name: "site name can not be longer than 256 characters"</p>	<p>The user provided a 'Site name' that is too long. Shorten this to <256 characters and try again.</p>
<p>Invalid input value Vs30: "vs30 100.0 is smaller than the minimum (150) "</p> <p>Or</p> <p>Invalid input value Vs30: "vs30 3500.0 is bigger than the maximum (3000) "</p>	<p>The user provided a 'Vs30' that is too small or too large. Replace it with a float within the range 150 - 3000 and try again</p>
<p>Site at lon=38.0 lat=-41.0 is not covered by any model!</p>	<p>The requested site coordinates are not covered by a hazard model and so the calculation cannot be run. This includes sites in the USA!</p>

Table 1: Known error messages that a WebUI user may encounter, including the cause and - if applicable - the action the user should take. ¹XXX is the coordinate entered by the user.

Monitoring Calculation Progress

Once a calculation has been submitted, it will appear in the list of calculations. In the example below, we can see a calculation in the process of being executed:

Run an AELO calculation

Latitude Longitude Site name

ASCE standards Site class Vs30 (m/s)

List of calculations from aelo-beta.openquake.org

ID	User	Calculation	Description	Start time	Status	Action
319	kendra.johnson@aelo-beta	classical	AELO for voghera	2025-05-30, 15:39:31 UTC	submitted	<input type="button" value="Console"/> <input type="button" value="Abort"/>

Figure 3: AELO calculation in execution

Please note that the AELO system can run one calculation at a time. In case a new calculation is submitted while a previous one is still running, the new calculation is enqueued and it is displayed in the list as pending. Depending on the location of the site, the calculation may take several minutes to execute. The AELO system will send you an email message when the calculation terminates, and the calculation will continue execution even if the browser tab is closed. The email notification will report relevant information about the calculation. The subject will indicate the job identifier and will state if the calculation finished correctly or not. The body will first report the input values specified by the user in the form. Then, in case of error, it will give an explanation of the problem that occurred, otherwise it will provide a link to open the web page displaying the outputs of the calculation (see Figure 4). The same page can be accessed by clicking on the “Outputs” button that appears in the web interface.

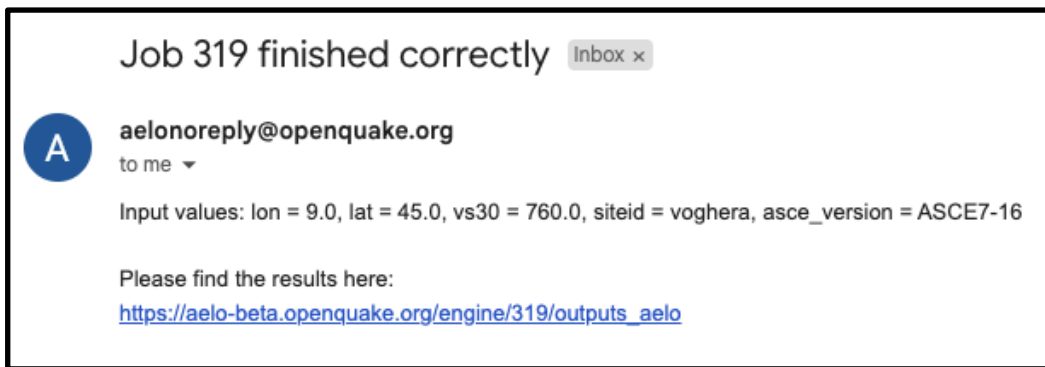


Figure 4: Email announcing completed job with link to outputs

Downloading Calculation Outputs

Outputs from site: 7-16demo, lat: [REDACTED], lon: [REDACTED] vs30: 760.0, AELO version: 2.0.beta, ASCE7-16

ID	Name	Action
2070	ASCE 7 Parameters	Download csv
	PGA (g) 0.11	
	Ss (g) 0.24	
	S1 (g) 0.079	
2071	ASCE 41 Parameters	Download csv
	BSE2N_Ss (g) 0.24	
	BSE2E_Ss (g) 0.17	
	BSE1N_Ss (g) 0.16	
	BSE1E_Ss (g) 0.084	
	BSE2N_S1 (g) 0.079	
	BSE2E_S1 (g) 0.057	
	BSE1N_S1 (g) 0.053	
2075	Maximum Considered Earthquake	Download csv
2079	Site Model	Download csv

[View advanced outputs page](#)

[Show site](#)

Outputs from site: [REDACTED] vs30: 365.0, AELO version: 2.0.beta, ASCE7-22

ID	Name	Action
2420	ASCE 7 Parameters	Download csv
	PGAm (g) 1.42	
	Sms (g) 3.35	
	Sm1 (g) 1.90	
2421	ASCE 41 Parameters	Download csv
	BSE2N_Sxs (g) 3.73	
	BSE2E_Sxs (g) 2.86	
	BSE1N_Sxs (g) 2.48	
	BSE1E_Sxs (g) 1.73	
	BSE2N_Sx1 (g) 1.90	
	BSE2E_Sx1 (g) 1.43	
	BSE1N_Sx1 (g) 1.27	
	BSE1E_Sx1 (g) 0.75	
2426	Response Spectrum	Download csv

[View advanced outputs page](#)

[Show site](#)

Figure 5: Calculation Outputs landing pages (top: for ASCE 7-16 & ASCE 41-17, bottom: for ASCE 7-22 & ASCE 41-23)

AELO calculations produce a number of different outputs divided into two categories: the most important outputs featured on the landing page of the “Outputs” button/link, and outputs accessible by clicking the button “View advanced outputs page” that may be interesting or useful to advanced users. The primary results are printed within the outputs table, and are also downloadable in .csv format by clicking the “Download csv” buttons at right (see Figure 5); these are the ASCE 41 and ASCE 7 parameters, the probabilistic, deterministic and governing maximum considered earthquake (MCE) ground motion levels, and the site parameters (site model). Note that the parameters provided will differ depending on the site class. All outputs are documented in more detail in the [Description of Calculation and Outputs](#) section.

The “Show site” button at bottom center displays a basic map with an “x” marker placed at the input coordinates (see figure 6). Each country shown in the map is filled with a random color. The main

purpose of this map is to provide an easy way to check if the given input coordinates are correct and in the right order.

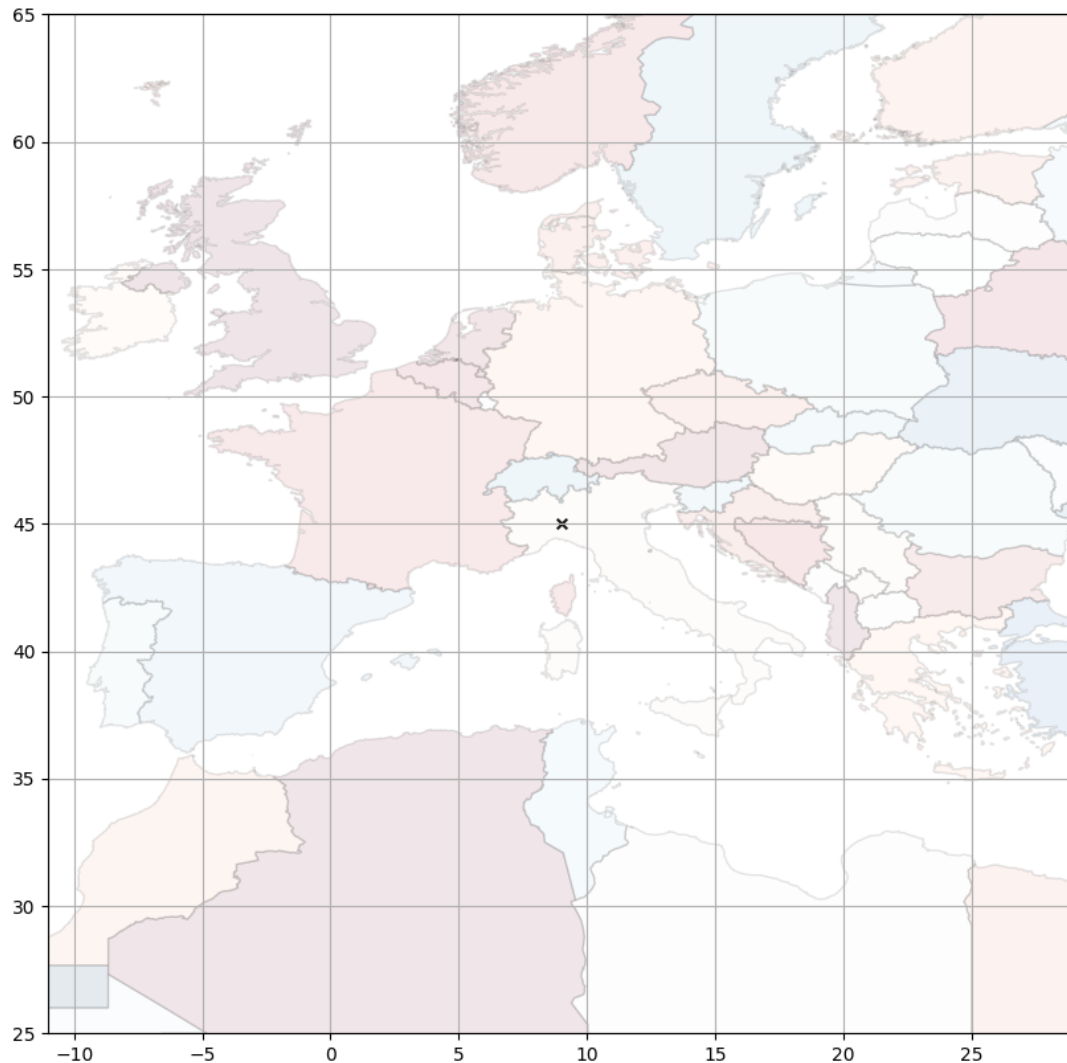


Figure 6: Map showing the location of the input coordinates

On the “Advanced outputs” page (see Figure 7), several figures can be viewed using the buttons labeled with “Show ...”. A figure can be saved by right-clicking the button and choosing “Save link as...”. The full set of outputs and figures are included only when the deterministic part of the calculation is completed (see the [Description of Calculation and Outputs](#) section).

It is also possible to download the HDF5 datastore containing all of the calculation outputs, although we do not recommend this approach for most users since this file can be rather large and requires programming skills to interrogate effectively.

Please note also that outputs in the RST format, such as the Full Report, can sometimes contain very wide tables leading to very long lines. In order to view these files effectively, we recommend using a graphical viewer such as Microsoft WordPad which allows the user to disable automatic word wrapping.

Outputs from site: voghera, lat: 45.0, lon: 9.0, vs30: 760.0

ID	Name	Type	Action
2433	ASCE 7 Parameters	asce07	Download csv
2434	ASCE 41 Parameters	asce41	Download csv
2435	Full Report	fullreport	Download rst
2436	Hazard Curves	hcurves	Download csv Download npz
2438	Response Spectrum	mce	Download csv
2439	Hazard Curves per Source	mean_rates_by_src	Download csv
2442	Site Model	site_model	Download csv
2443	Uniform Hazard Spectra	uhs	Download csv Download npz

[View simplified outputs page](#)

[Show governing MCE](#)

[Download hdf5 datastore](#)

[Show hazard curves](#)

Outputs from site: [REDACTED] vs30: 365.0

ID	Name	Type	Action
2420	ASCE 7 Parameters	asce07	Download csv
2421	ASCE 41 Parameters	asce41	Download csv
2422	Full Report	fullreport	Download rst
2423	Hazard Curves	hcurves	Download csv Download npz
2425	Deterministic Earthquake Scenarios	mag_dst_eps_sig	Download csv
2426	Response Spectrum	mce	Download csv
2427	Mag-Dist-Eps Disaggregation per Source	mean_disagg_by_src	Download csv
2428	Hazard Curves per Source	mean_rates_by_src	Download csv
2431	Site Model	site_model	Download csv
2432	Uniform Hazard Spectra	uhs	Download csv Download npz

[View simplified outputs page](#)

[Show governing MCE](#)

[Download hdf5 datastore](#)

[Show hazard curves](#)

[Show hazard curves per source](#)

Figure 7: Advanced outputs pages (top: using ASCE 7-16, no deterministic calculation completed; bottom: using ASCE 41-17, deterministic calculation completed)

Output Exceptions

For some sites, the service cannot currently provide results, or we do not recommend using them. The reasons and the corresponding responses from the web interface are described here.

1. *The site is not covered by a hazard model in the Mosaic:* a pop-up window will indicate that the site is uncovered, and no calculation will begin. This includes latitude/longitude pairs that are inside of the U.S., which the AELO WebUI does not cover, as well as offshore areas for which our models have not been tested. **If you encounter a site that you believe returns this error incorrectly, please contact aelo_support@globalquakemodel.org.**
2. *The site is covered, but we do not recommend using results from the encompassing model at this time:* the calculation completes, but the email alert and a warning bar on the main outputs page warns that the results are preliminary

Outputs from site: AELO for [REDACTED], lat: [REDACTED], lon: [REDACTED], vs30: 760.0

WARNING: Results are preliminary. The seismic hazard model used for the site is under review and will be updated during Year 3.

3. *The calculated hazard is very low:* the calculation completes correctly, but the hazard was too low to compute the ASCE parameters

Outputs from site: AELO for [REDACTED] lat: [REDACTED] lon: [REDACTED], vs30: 760.0

WARNING: The seismic hazard at the site is very low. ASCE 7-16 and ASCE 41-17 parameters cannot be computed.

4. *The site is covered by a hazard model, but the model does not include sources within the maximum considered distance of the site:* the calculation completes, but the hazard is zero because no ruptures occurred nearby, and therefore ASCE parameters cannot be computed

Outputs from site: AELO for [REDACTED], lat: [REDACTED], lon: [REDACTED], vs30: 760.0

WARNING: The seismic hazard at the site is 0: there are no ruptures close to the site. ASCE 7-16 and ASCE 41-17 parameters cannot be computed.

5. *The MCE* calculated at the site is very low (but >0g):* the calculation completes and provides a complete set of ASCE 7-16 and ASCE 41-17 parameters, but some or all of the results are lower than commonly adopted default minimum values; users may need to increase the parameter values to their specified minimums

Outputs from site: [REDACTED] 760.0, AELO version: 2.0.beta, ASCE7-22

WARNING: The ASCE 7 and/or ASCE 41 parameter values at the site are very low. User may need to increase the values to user-specified minimums (e.g., $S_s=0.11g$ and $S_1=0.04g$). See User Guide.

* See [Description of Calculated Outputs](#)

Some users may also choose to apply default values that correspond to predefined lower thresholds in cases 3 and 4. Given the expectation of different policies for these limits among users, the WebUI does not assign any specific values to these parameters.

Description of Calculation and Outputs

The methodology used for this analysis is described in the report summarizing the activities completed within the first three years of the AELO project. A shorter description of the method implemented can be found in Villani et al. (2023). The main steps composing the workflow consist of the following:

- Calculation of hazard curves from a probabilistic seismic hazard analysis
- Calculation of probabilistic Risk-targeted Maximum Considered Earthquake (MCE_R) and Geometric Mean Maximum Considered Earthquake (MCE_G) ground motions
- For cases where the Probabilistic MCE (MCE_R or MCE_G) does not exceed the deterministic lower limit, the governing MCE is the one obtained from the probabilistic analysis. Otherwise, we perform the following:
 - Identification of the earthquake sources controlling the hazard at the site
 - Calculation of disaggregation results for each individual source and selection of the controlling scenarios (i.e. the magnitude, distance and epsilon combination with the largest contribution to the hazard) for each respective source
 - Calculation of deterministic MCE_R and MCE_G using the scenarios obtained at the previous points, subject to the deterministic lower limits. Please refer to USGS-GEM Year 3 final report for more details.
 - Calculation of the governing Maximum Considered Earthquake as the minimum between the deterministic and probabilistic MCE. Please refer to USGS-GEM Year 3 final report for more details.

All outputs provided by the web interface are described below. The final results are in the files *ASCE 7 parameters* and *ASCE 41 parameters*, and are featured on the outputs landing page (“Simplified outputs”). **Most users are likely to use only these**; however, several additional outputs are available with results from intermediate steps that can be accessed by clicking “View advanced outputs page” at bottom left.

Main outputs

Note: * indicates that the field is printed on the simplified outputs page.

+ Parameter not exported.

ASCE 7-16 and ASCE 7-22 parameters (.csv)

•**PGA*** Maximum Considered Earthquake Geometric Mean (MCE_G) peak ground acceleration = $\min(PGA_{2_50}, PGA_{det})$

•**PGA_2_50** Uniform-hazard PGA with a 2% probability of being exceeded in 50 years

•**PGA_84th** Deterministic, 84th-percentile PGA; not needed if $PGA_{2_50} \leq 0.5g$

•**PGA_det** $\max(PGA_{84th}, 0.5g)$

•**Ss*** $\min(Ss_{RT}, Ss_{det})$; MCE_R , 5% damped, spectral response acceleration parameter at a period of 0.2 s; for site class BC only

•**S_{Ds}**⁺ $0.9 \times \max(SA)$ for SA in the period (T) range [0.2 - 5.0] s

•**S_{Ms}**^{*} $1.5 \times S_{Ds}$

•**Ss_RT** Risk-targeted SA at 0.2s

•**S_{s,2/50}**⁺ Uniform-hazard SA at 0.2s with a 2% probability of being exceeded in 50 years

•**CRs** Risk coefficient, $Ss_{RT} \div S_{s,2/50}$

•**Ss_84th** Deterministic, 84th-percentile SA at 0.2s

•**Ss_det** $\max(Ss_{84th}, 1.5g)$

•**Ss_seismicity** FEMA P-154 (2015) seismicity region from Ss alone

•**S1*** $\min(S1_{RT}, S1_{det})$; MCE_R 5% damped, spectral response acceleration parameter at a period of 1 s; for site class BC only

•**S_{D1}**⁺ $\max\{0.9 \times \max(T \times SA), SA(T=0.1s)\}$, for SA in the period (T) range [1.0 - T_{max}]

Where $\begin{cases} T_{max} = 2s \text{ for } V_{s30} > 442 \text{ m/s} \\ T_{max} = 5s \text{ for } V_{s30} \leq 442 \text{ m/s} \end{cases}$

•**S_{M1}**^{*} $1.5 \times S_{D1}$

•**S1_RT** Risk-targeted SA at 1.0s

•**S_{1,2/50}**⁺ Uniform-hazard SA at 0.2s with a 2% probability of being exceeded in 50 years

•**CR1** Risk coefficient, $S1_{RT} \div S_{1,2/50}$

•**S1_84th** Deterministic, 84th-percentile SA at 1.0s

•**S1_det** $\max(S1_{84th}, 0.6g)$

•**S1_seismicity** FEMA P=154 (2015) seismic region from S1 alone

ASCE 41-17 parameters (.csv)

Note: the syntax changes for ASCE 41-23, e.g. BSE2N_Ss -> BSE2N_Sxs

•**BSE2N_Ss*** Same as Ss above (or Sms for ASCE 41-23, site classes other than BC)

•**BSE2E_Ss*** $\min(Ss_{5_50}, BSE2N_Ss)$

•**Ss_5_50** Uniform-hazard SA at 0.2s with a 5% probability of being exceeded in 50 years

•**BSE1N_Ss*** $2/3 * BSE2N_Ss$

•**BSE1E_Ss*** $\min(Ss_{20_50}, BSE1N_Ss)$

•**Ss_20_50** Uniform-hazard SA at 0.2s with a 20% probability of being exceeded in 50 years

- BSE2N_S1*** Same as S1 above
- BSE2E_S1*** $\text{Min}(S1_5_50, BSE2N_S1)$
- S1_5_50** Uniform-hazard SA at 1.0s with a 5% probability of being exceeded in 50 years
- BSE1N_S1*** $2/3 * BSE2N_S1$
- BSE1E_S1*** $\text{Min}(S1_20_50, BSE1N_S1)$
- S1_20_50** Uniform-hazard SA at 1.0s with a 20% probability of being exceeded in 50 years

Advanced outputs

All outputs included in the “Simplified outputs” are also available on the “Advanced outputs” page. Some results are available in multiple formats, which may not be readily accessible to all users; however, they are included on this page if they are useful to the most advanced users or developers.

Full Report (.rst)

This file lists information about the calculation itself, including details about computation times and memory use; can be opened in text editors such as Vim, Apple TextEdit, or Microsoft Notepad

Hazard curves (.csv, .npz)

A hazard curve represents the most fundamental result computed for a site with a probabilistic seismic hazard analysis. It provides for various values of a selected intensity measure type (i.e. a scalar parameter describing a property of the expected shaking denoted in the header as *poe-<value>*) the corresponding probability of exceedance in the investigation time (in most of the cases corresponding to one year). The AELO web service provides hazard curves for each investigated site for three intensity measure types (IMTs) including PGA and Spectral Acceleration (5% damping) for periods of 0.2 and 1.0 seconds. Typical users should use the .csv formatted file.

Deterministic Earthquake Scenarios (.csv)

Representative scenario parameters per source and IMT derived from the single-source disaggregation results and used to compute the deterministic MCE.

Hazard curves per Source (.csv)

This file provides values of the rate of exceedance in the investigation time (i.e. the hazard curves) obtained using the individual seismic sources controlling the probabilistic seismic hazard. The file contains several rows where each row provides the ID of the source, a label specifying the intensity measure type (IMT), a value of ground motion and the corresponding value of the rate of exceedance. A hazard curve for a single source and IMT can be extracted from this file by selecting the rows with fixed values of the source ID and IMT.

Mag-Dist-Eps Disaggregation per Source (.csv)

This file provides the results of disaggregation by magnitude, distance, and epsilon (the coefficient of sigma in the ground motion aleatory uncertainty) for each of the sources that most contribute to the hazard at the spectral acceleration corresponding to the probabilistic MCE for each IMT (the MCEs are specified in the header). For each row the columns represent: the ID of the source, the center value of the disaggregation bin for magnitude, distance and epsilon, the intensity measure type

(IMT, e.g. spectral acceleration at a certain period of peak ground acceleration), and the rate of exceedance for the given bin at the MCE. Only bins with non-zero rate contributions are included.

Uniform Hazard Spectra (.csv, .npz)

A spectrum where each ordinate has the same probability of being exceeded in the investigation time. This file contains values for the same intensity measure types listed in the description of hazard curves with certain values of the probability of exceedance in the investigation period. Here, the values of probability correspond to 10% and 2% probability of exceedance in 50 years. Typical users should use the .csv formatted file.

Response Spectra (.csv)

This file summarises the values computed at different steps and used to define the governing maximum considered earthquake (MCE) ground motion levels. For each IMT, the following are provided: deterministic lower limit (DLL), probabilistic MCE (ProbMCE), deterministic MCE (DetMCE); *nan* if the ProbMCE < DLL), and MCE. The site id (sid) is always 0 for calculations run for a single site (e.g. from the web service).

Site Model (.csv)

This file lists all the information about the site that was used for the calculation: the position information longitude (lon) and latitude (lat) and depth (always 0.0 km); and the site conditions Vs30, depth to shear wave velocity of 1.0 km/s (z1pt0, units of m), depth to shear wave velocity of 2.5 km/s (z2pt5, units of km), and Vs30 measured (the assumption that the site condition is known). The values z1pt0 and z2pt5 are calculated inside the workflow based on the given Vs30 or site class.

Figures and datastore

The buttons at the bottom of the "Advanced outputs" page provide three figures and the calculation datastore.

Hazard curves

Plot of the hazard curves computed during the probabilistic component of the calculation. Plot shows the intensity measure level "acceleration" (g) versus annual frequency of exceedance in which:

- PGA hazard curve (yellow solid line) accelerations are in terms of the geometric mean
- Spectral accelerations in terms of the maximum component, converted from the geometric mean using the ASCE 7-16 or 7-22 scale factors

Hazard curves per source

Note: *These plots are created only when deterministic ground motions need to be computed, i.e., when at least one of the probabilistic MCE ground motions exceeds the corresponding deterministic lower limit.*

Each plot includes for the given intensity measure type (IMT):

- The total mean hazard curve from the probabilistic calculation
- The probabilistic MCE that is disaggregated in the deterministic part of the workflow
- The hazard curve for each seismic source considered. The hazard curves for sources with the greatest contributions to the probabilistic MCE (e.g., the annual frequency of exceedance for

the probabilistic MCE is at least 10% of that for the source contributing most) are colored and identified by their source ID (an OpenQuake source property) in the legend, while the other hazard curves are colored in gray.

The plot contains all three IMTs, using the geometric mean to represent PGA, but the maximum horizontal component for the other two IMTs as in the figure *Hazard curves*.

Governing MCE

This plot shows all of the hazard values and thresholds that were used to choose the final governing MCE, as described in the workflow above. PGA_{84th} , $S_{S,84th}$, $S_{1,84th}$, $S_{S,RT}$, $S_{1,RT}$, and $PGA_{2/50}$ are as defined in the ASCE 7-16 outputs (*PGA_84th*, *Ss_84th*, *S1_84th*, *Ss_RT*, and *PGA_2_50*). DLL is the deterministic lower limit for the corresponding period, and the governing MCEs are PGA, S_s , and S_1 (*PGA*, *Ss*, and *S1*) in the ASCE 7-16 outputs.

hdf5 datastore

This is a large file containing large volumes of data about the calculation and results. Viewing and understanding the contents takes high knowledge of the software underlying the AELO WebUI; typical users do not need this file.

Nightly Quality Checks

The WebUI calculations use the OpenQuake (OQ) Engine, which is constantly undergoing development. To ensure that changes to the OQ Engine do not affect the results given by the WebUI, nightly tests are completed to confirm that new values do not deviate substantially from the original ones from Year 1 of the AELO project. If values do deviate, the development team investigates whether a new software bug has been introduced or, instead, if the new values are correct.

QGIS Plugin

It is also possible to view and download AELO outputs using GEM's open-source IRMT plugin for the Desktop GIS tool, QGIS.

Please see the following web page for installation instructions: https://docs.openquake.org/oq-irmt-qgis/latest/00_installation.html

Connect to AELO Web Service

Once the plugin has been installed, open the settings as shown in the figure below:

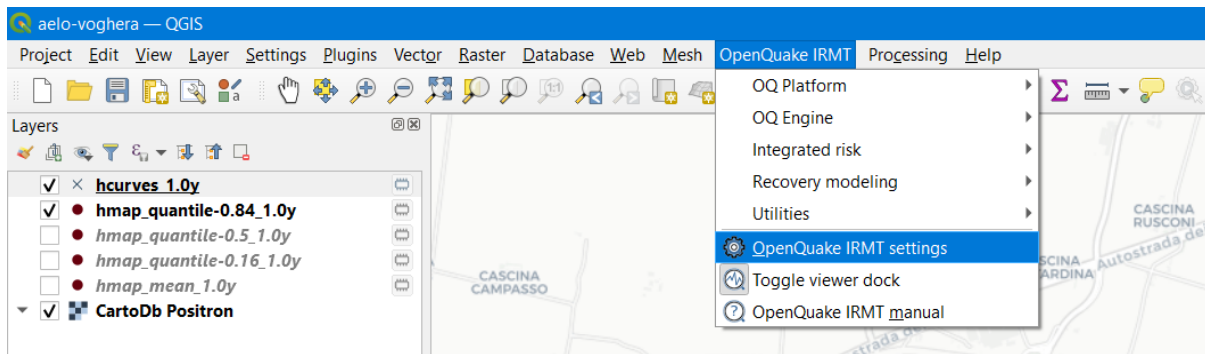


Figure 8: IRMT settings in QGIS

Click on the “New” button in the “OpenQuake Engine connection profile”.

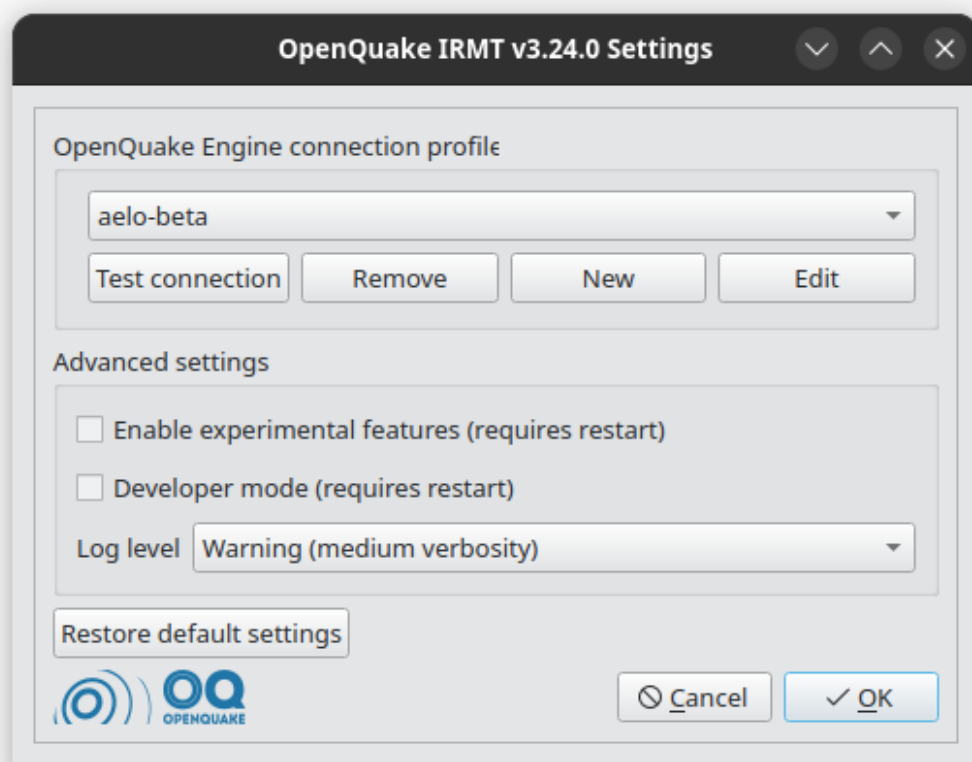


Figure 9: QGIS Plugin: New engine connection profile

Then fill in the form as shown in the figure below, obviously inserting your own username and password.

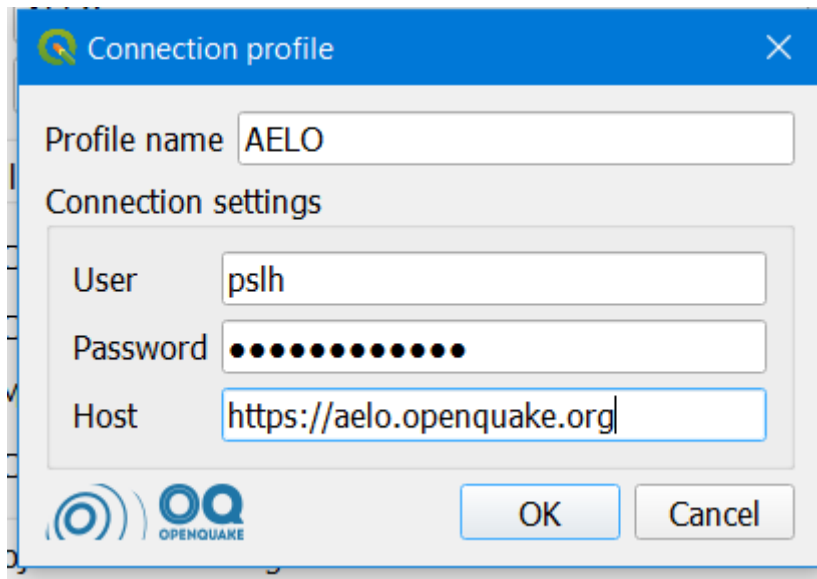


Figure 10: QGIS Plugin: AELO Connection settings

Test the connection with the “Test Connection” button. Assuming all is well, you can now connect to the AELO web service using the “Drive the OpenQuake Engine” menu item/icon, as shown in the figure below:

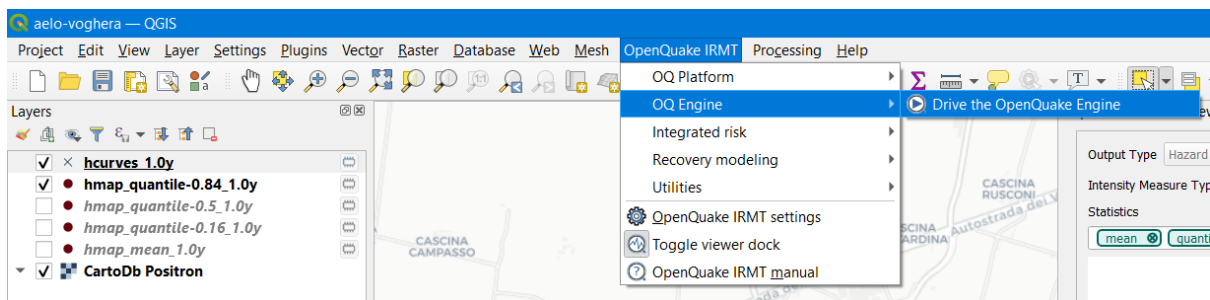


Figure 11: QGIS Plugin: Drive the OpenQuake Engine

The list of available calculations will be shown in a window similar to the one shown in the figure below:

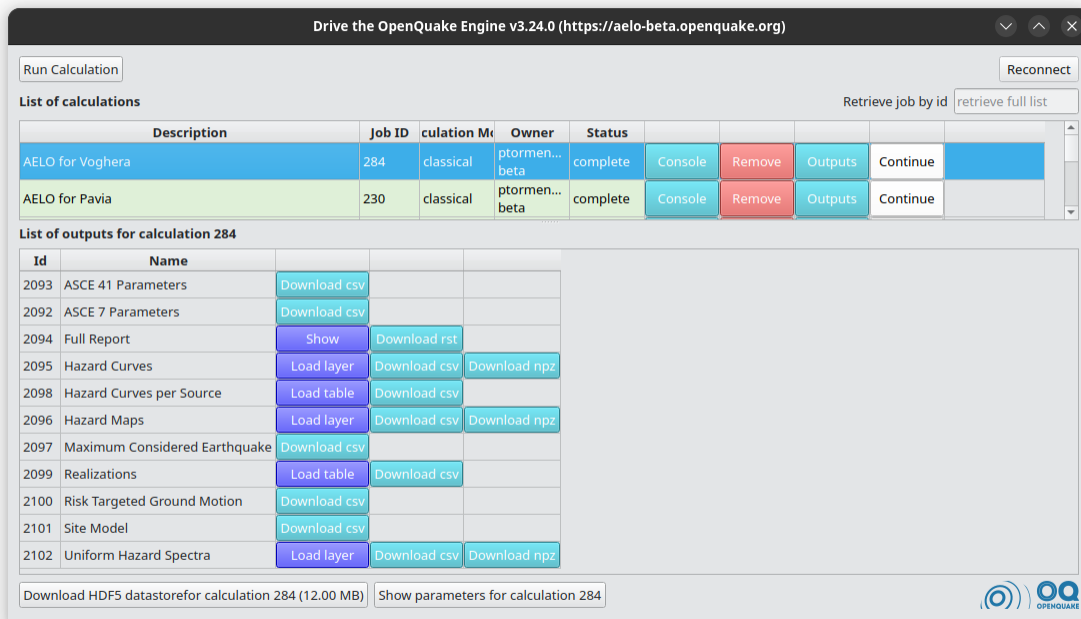


Figure 12: QGIS Plugin: Drive the OpenQuake Engine

In addition to the download options available via the Web UI, for some output types we also have a “Load Layer” option. For instance, if we click on the Load layer button for the Hazard Curve or Uniform Hazard Spectra outputs, we can view the curves in the graph viewer.

For AELO calculations, the default options for loading hazard curves are generally fine:

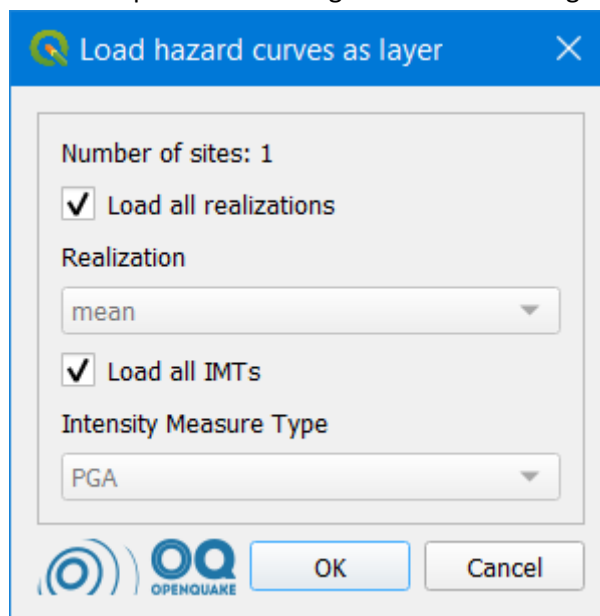


Figure 13: QGIS Plugin: default hazard curve options

After pressing OK, a layer will be loaded with a single cross icon identifying the site. Use “Select Features by Area” to select the site:

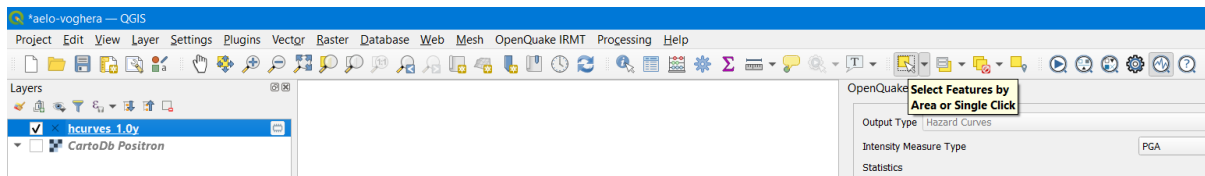


Figure 14: QGIS Select Feature by Area

The graph area will be updated to show hazard curves for the selected site:

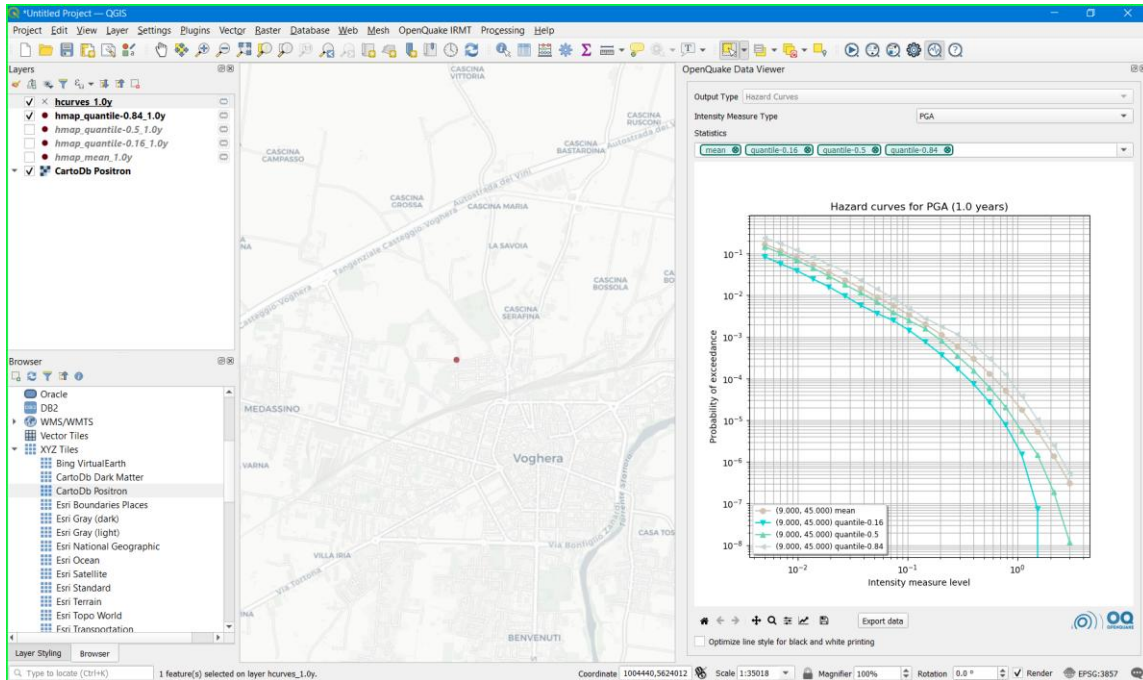


Figure 15: QGIS Plugin presenting hazard curves

Using the drop-down menus in the QGIS Plugin Data Viewer area, it is possible to change Intensity Measure Type and (de)select mean and quantile curves:

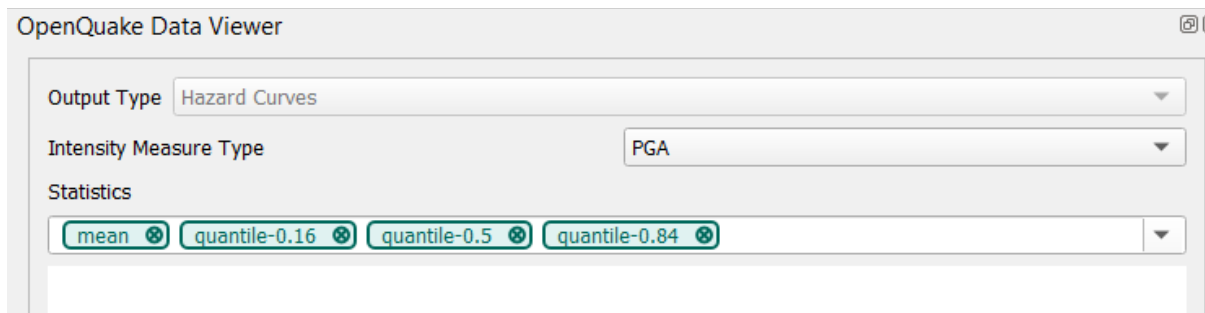


Figure 16: QGIS Plugin Data Viewer controls

For further information regarding the IRMT plugin please refer to the user manual <https://docs.openquake.org/oq-irmt-qgis/latest/>

Using the REST API

The AELO web service can also be accessed programmatically via a REST API, this is useful for integrating AELO with existing systems and/or for automated, non-interactive workflows.

This section briefly describes the REST API endpoints used for the most common operations. Please see <https://github.com/gem/oq-engine/blob/master/doc/web-api.md> for additional information regarding the OpenQuake engine REST API.

Authentication, login/logout

POST /accounts/ajax_login/

Attempt to login, given the parameters `username` and `password`

POST /accounts/ajax_logout/

Logout

Running a calculation

POST /v1/calc/aelo_run

Run a new aelo calculation for a site with the specified parameters.

Parameters:

- * `lon`: the longitude of the site (a float in the interval `[-180, +180]`)
- * `lat`: the latitude of the site (a float in the interval `[-90.0, +90.0]`)
- * `vs30`: the time-averaged shear-wave velocity from the surface to a depth of 30 meters (a float in the interval `[150.0, 3000.0]`)
- * `siteid`: a description to assign to the site (<256 characters)

Response:

The input values are validated and a `400 Bad Request` response is returned in case any invalid input is found, specifying the reason of the failure. If inputs are valid, the engine will first attempt to identify a Mosaic model that covers the given site, returning a `400 Bad Request` response in case the site does not belong to any of the Mosaic models. Otherwise, a new job is created and a `200 OK` response is returned, like:

```
{"status": "created",
  "job_id": 1,
  "outputs_uri": "http://localhost:8800/v1/calc/1/results",
  "log_uri": "http://localhost:8800/v1/calc/1/log/0:",
  "traceback_uri": "http://localhost:8800/v1/calc/1/traceback"}
```

``outputs_uri`` can be used later to retrieve calculation results, after the job is complete.

``log_uri`` can be called to get the log of the calculation, either while it is still running or after its completion.

``traceback_uri`` can be called in case of job failure (and only after it occurs), to retrieve a full traceback of the error.

As soon as the job is complete, a notification is automatically sent via email to the user who launched it. In case of success, the message will contain a link to the web page showing the outputs of the calculation; otherwise, it will describe the error that occurred.